

User Guide

Manual

del Usuario



4 FT. INFLATABLE GRIM REAPER

ÁNGEL DE LA MUERTE INFLABLE DE 4 PIES



ENGLISH: PAGES 2-6
SPANISH: PAGES 7-11

USA

DISTRIBUTED BY • DISTRIBUIDO POR:
ALDI INC., BATAVIA, IL 60510
www.aldi.us

AFTER SALES SUPPORT • SERVICIO DE POSVENTA

1-888-529-6524 www.4seasonsglobal.com

Item #: 48360

10/2015

1

YEAR WARRANTY
AÑO DE GARANTIA

Welcome

Congratulations!

You have made an excellent choice with the purchase of this quality Huntington Home product.

By doing so you now have the assurance and peace of mind which comes from purchasing a product that has been manufactured to the highest standards of performance and safety, supported by the high quality standards of ALDI.

We want you to be completely satisfied with your purchase so this Huntington Home product is backed by a comprehensive manufacturer's 1 year warranty and an outstanding after sales service through our dedicated Helpline.

We hope you will enjoy using your purchase for many years to come. If you require technical support or in the unlikely event that your purchase is faulty please call our After Sales Support for immediate assistance. Faulty product claims made within the 1 year warranty period will be repaired or replaced free of charge provided that you have satisfactory proof of purchase (keep your receipt). This guarantee is in addition to your statutory rights. Your statutory rights are not affected. This limited warranty does not apply in cases of damage caused by accident, improper use, abuse and force majeure.

This limited warranty will be invalidated if the inflatable is tampered with in any way whatsoever. In case of questions or technical problems please call the following toll-free help line number: 1-888-529-6524, Monday – Friday 9am to 5pm CST.

If the inflatable has to be returned to us, it must be packed correctly as we cannot accept any responsibility for damage caused in transit.

Contents

Safety Instructions	4
Pack Contents/Parts.....	5
Assembly Instructions	6
Troubleshooting.....	6

Please read and follow all instructions carefully before using the product and retain for future reference.

- This product is not intended for permanent installation or use.
- Do not mount or place near gas or electric heaters, fireplaces, candles, or other similar sources of heat.
- Do not secure or place product wiring on staples, nails, or sharp hooks.
- Unplug the product when leaving the house, or if left unattended.
- This is an electric product, not a toy! To avoid risk of fire, burns, personal injury or electric shock, this product should not be played with or placed where small children can reach it.
- Do not hang ornaments or other objects from the cord.
- Before using or reusing, inspect the product carefully. Discard any products that have cuts, damages or frayed wire insulation cords, cracks, loose connections or exposed copper wire.
- Do not remove or change the bulb inside while the power is on.
- Operation in extreme weather conditions is not recommended. Please store the product indoors under these conditions.
- This is a Halloween decoration, not a toy. Please keep away from children!

Pack Contents/Parts

12V / 0.7A DC low voltage transformer for outdoor use	1 pc
Motor 12V / 0.5A	1 pc
Water resistant inflatable	1 pc
Black plastic stakes	4 pcs
LED lights	3 pcs
Tether Ropes	2 pcs

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: PROPOSITION 65 WARNING
 THIS PRODUCT MAY CONTAIN CHEMICALS
 KNOWN TO THE STATE OF CALIFORNIA TO
 CAUSE CANCER, BIRTH DEFECTS OR OTHER
 REPRODUCTIVE HARM.
 WASHER HANDS AFTER USE.

1. Remove the contents from the package.
Lay out the inflatable on a flat and clear area. Locate the zipper at the bottom near the blower and close it. Do not place any foreign objects inside the inflatable.
2. Lay out the electric blower upright on the ground. Plug the unit into a general power outlet to inflate the product. It is helpful to lift up the blower by hand to avoid clogging the intake. Do not block the air intake area for the blower.
3. Tie the rope to the top of the stake with a secure knot. Attach the tether rope to the fabric loop located on the side of the inflatable. Fasten the rope into the ground using the plastic stake (Included).



Troubleshooting

Troubleshooting Checklist:

If your inflatable is not inflating, the problem may be:

- The power source is disabled or the cord may be unplugged.
- Debris may be lodged in the motor.
- The zipper may not be securely fastened.

Bienvenido

¡Felicitaciones!

Hizo una fantástica elección al comprar este producto de calidad de Huntington Home.

Al hacerlo, tiene ahora la seguridad y tranquilidad de espíritu que vienen dados por la compra de un producto que ha sido fabricado con los más altos estándares de desempeño y seguridad, apoyados por las elevadas normas de calidad de ALDI.

Queremos que esté completamente satisfecho con su compra, por lo que este producto de Huntington Home está respaldado por una garantía integral de 1 año del fabricante y una excelente asistencia través de nuestro dedicado servicio posventa.

Esperamos que disfrute de su compra durante muchos años.

Si necesita asistencia técnica o en caso de que el producto tenga alguna falla, por favor comuníquese con nuestro servicio posventa para obtener asistencia de inmediato. Si la reclamación se realiza dentro del período de garantía de 1 año, los productos defectuosos serán reparados o reemplazados sin cargo alguno, siempre y cuando tenga una prueba satisfactoria de la compra (guarde su factura). Esta garantía se añade a sus derechos establecidos por ley. Sus derechos legales no se ven afectados. Esta garantía limitada no se aplica en los casos de daños causados por accidentes, uso indebido, abuso y fuerza mayor.

Esta garantía limitada se anulará si se altera la figura inflable de cualquier manera. Si tiene dudas o problemas técnicos, llame al siguiente número gratuito de la línea de ayuda: 1-888-529-6524, de lunes a viernes de 9:00 a.m. a 5:00 p.m. CST.

Si necesita devolver la figura inflable, debe empacarla correctamente, ya que no podemos aceptar ninguna responsabilidad por los daños provocados durante el transporte.

CONTENIDO

Instrucciones de seguridad	9
Contenido del paquete/piezas	10
Instrucciones de ensamblaje	11
Resolución de problemas	11

Por favor, lea detenidamente y siga todas las instrucciones antes de usar el producto y consérvelas para consultarlas en el futuro.

- Este producto no está indicado para un uso o instalación permanentes.
- No lo coloque ni instale cerca de calefactores de gas o eléctricos, chimeneas, velas ni otras fuentes de calor similares.
- No fije ni ubique los cables de este producto en grapas, clavos o ganchos filosos.
- Desenchufe el producto al salir de casa, o si se deja desatendido.
- Este producto es un aparato eléctrico, ¡no un juguete! Para evitar el riesgo de incendio, quemaduras, lesiones personales o descargas eléctricas, no debe jugarse con este producto ni colocarse en un lugar donde los niños pequeños puedan alcanzarlo.
- No cuelgue ornamentos u otros objetos del cable.
- Antes de usar o volver a usar el producto, inspecciónelo detenidamente. Deseche todos los productos que presenten cortes, tengan cables aislantes dañados o deshilachados, grietas, conexiones sueltas o cables de cobre expuestos.
- No saque o cambie la bombilla interior mientras esté conectado a la corriente eléctrica.
- No se recomienda el uso con condiciones meteorológicas extremas. Por favor, guarde el producto en el interior en estas situaciones.
- Este producto es una decoración de Halloween, no es un juguete. ¡Mantener fuera del alcance de los niños!


Contenido del paquete/piezas

Transformador de bajo voltaje de 12V / 0.7A CC para uso al aire libre	1 unidad
Motor de 12V / 0.5A	1 unidad
Figura inflable resistente al agua	1 unidad
Estacas de plástico negras	4 unidades
Luces LED	3 unidades
Cuerdas de amarre	2 unidades

1. Saque el contenido de la caja. Coloque la figura inflable sobre un área lisa y despejada. Ubique la cremallera que está situada en la parte inferior cerca del soplador y ciérrela. No coloque ningún objeto extraño en el interior de la figura inflable.



2. Coloque el soplador eléctrico en posición vertical sobre el suelo. Enchufe la unidad en un tomacorriente de uso general para inflar el producto. Levantar el soplador con la mano ayuda a evitar que la toma de aire se bloquee. No bloquee la zona de la toma de aire del soplador.

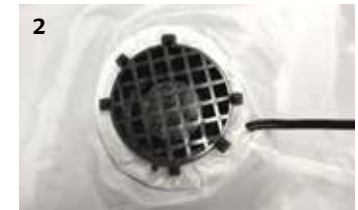

3. Ate la cuerda a la parte superior de la estaca con un nudo seguro. Fije la cuerda de seguridad al lazo de tela ubicado en el lateral de la figura inflable. Asegure la cuerda al suelo con la estaca de plástico (incluida).



Resolución de problemas

Lista de resolución de problemas:

Si su figura inflable no se infla, el problema puede ser:

- La fuente de alimentación está deshabilitada o el cable puede estar desenchufado.
- Puede haberse introducido suciedad en el motor.
- La cremallera podría no estar cerrada correctamente.